


1 - Remove this part of the QR from the Simucube hub




2 - Use the same screws and washers to mount the Simucube QR on the Extension. The QR must be mounted on the face marked WHEEL SIDE, in the 3 marked holes.

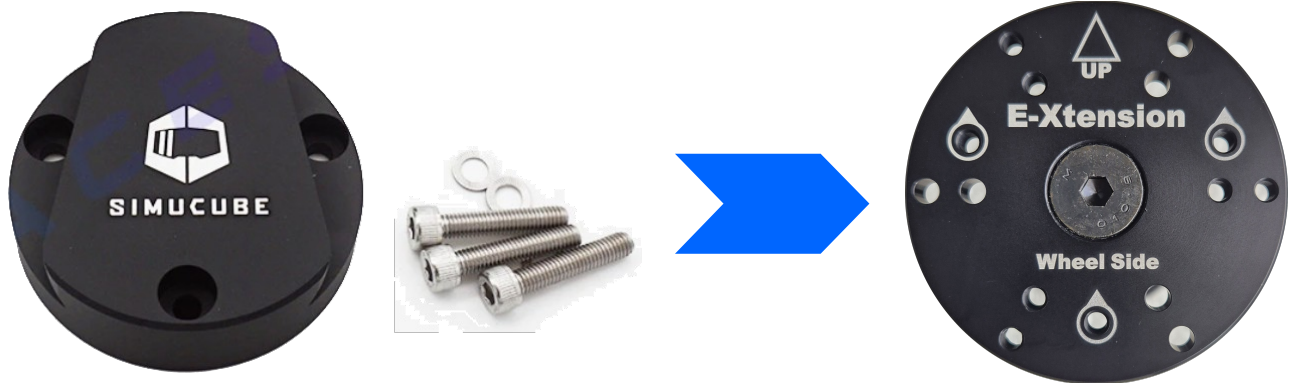

During assembly, keep the flange with the UP arrow facing up, and hold the Simucube QR as shown in the photo above.

3 - Then mount the Extension + QR assembly, on the Simucube motor, in the holes from which you previously unscrewed the 3 screws. Use 3 more M5x20 (or M5x25) screws. The screws will go through the 3 holes marked on the MOTOR SIDE face.

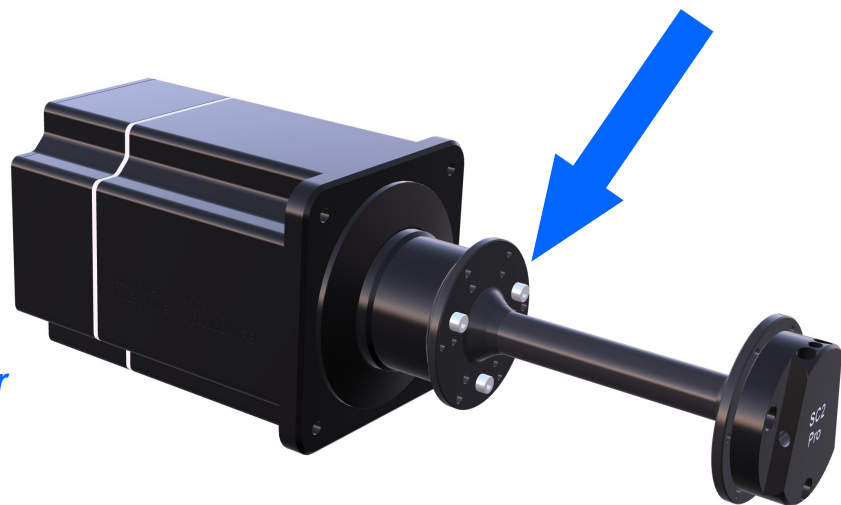

**ATTENTION:**  
it may be necessary  
reset the steering wheel center  
from the control panel  
True Drive - Simucube